



Chapter 1: Experience Design - Overview

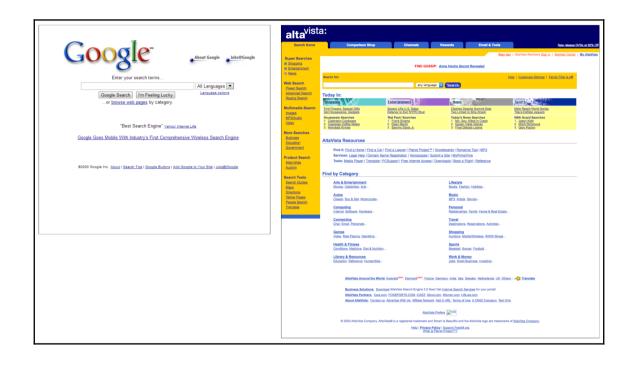


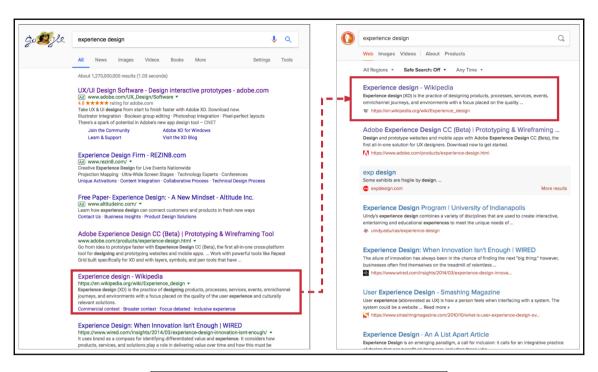

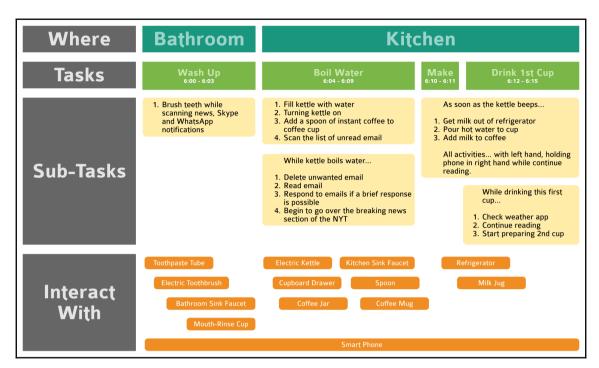


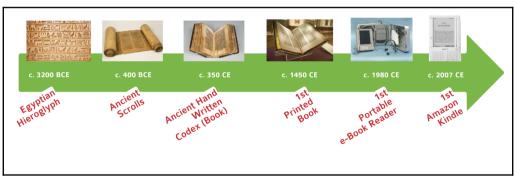




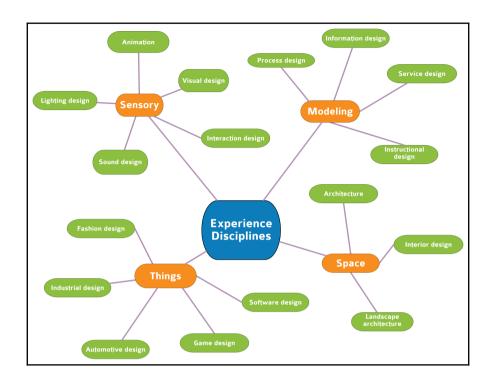



Chapter 2: The Experience Design Process

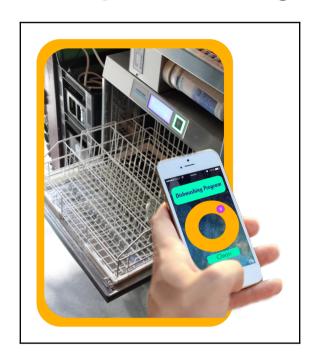

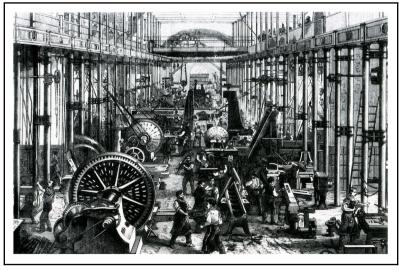



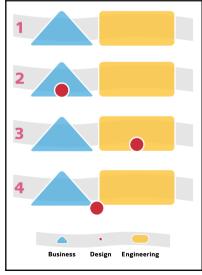

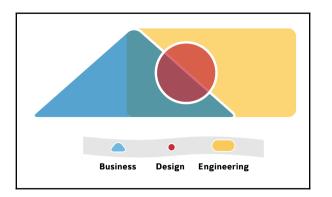












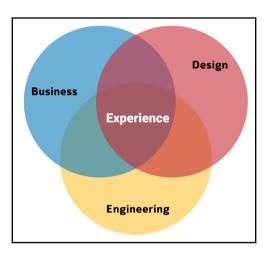


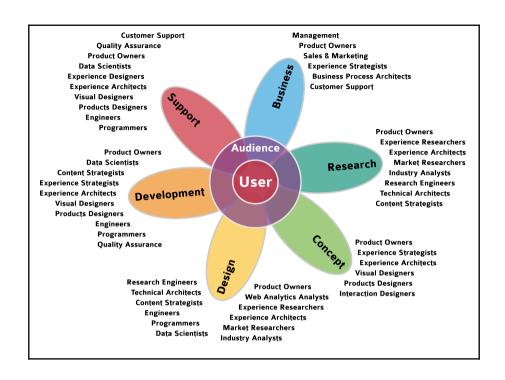


Chapter 3: Business and Audience Context




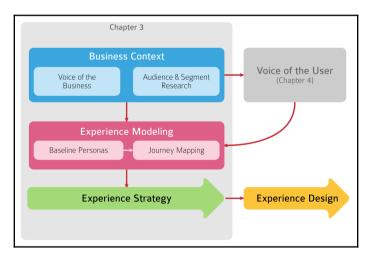


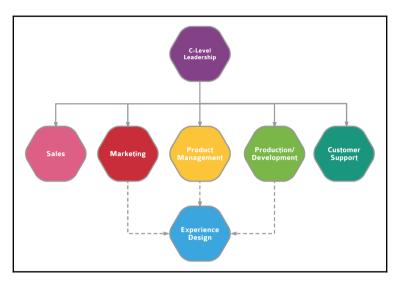





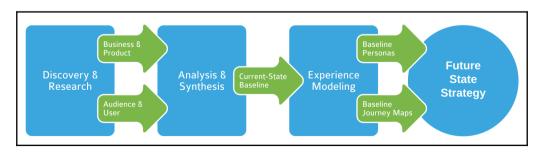

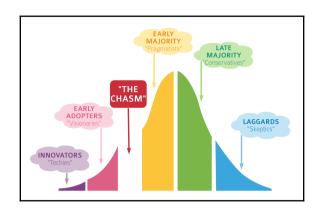

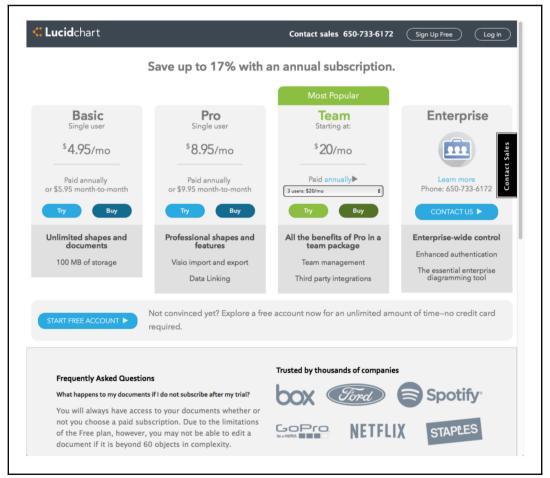

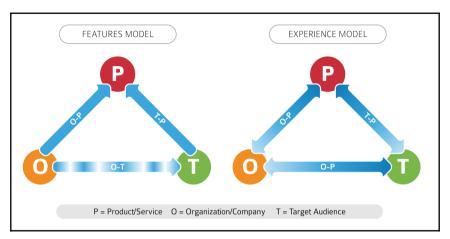


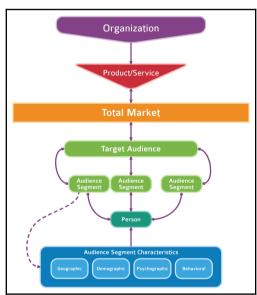










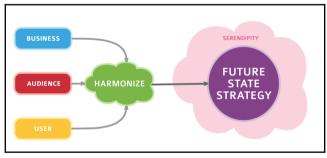



Chapter 4: The User and Context of Use

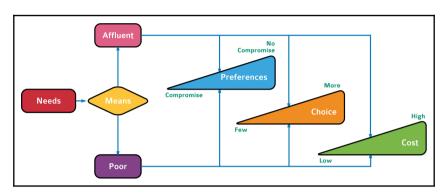


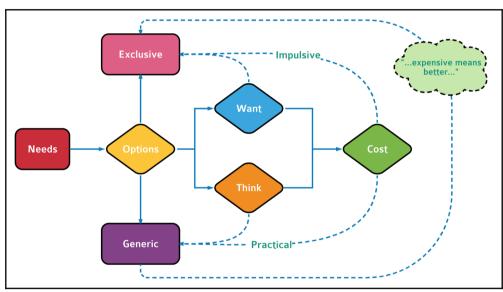


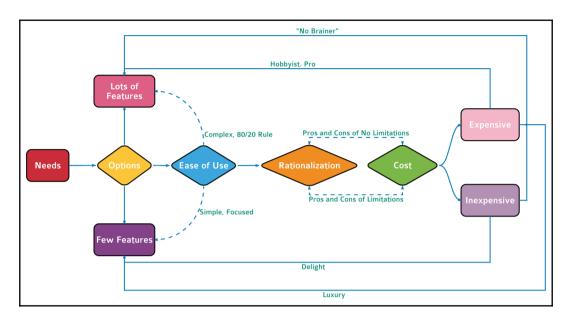


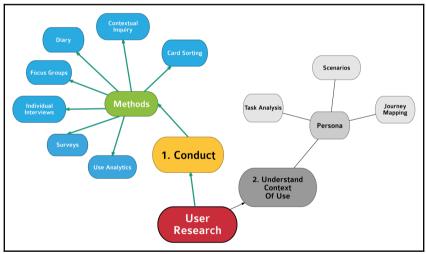


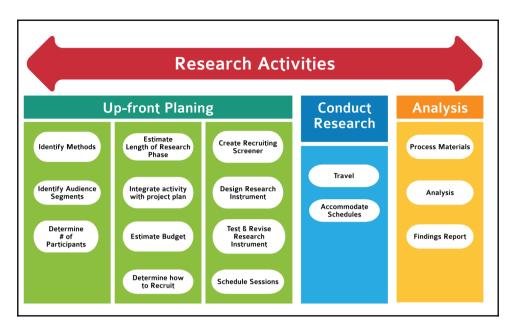


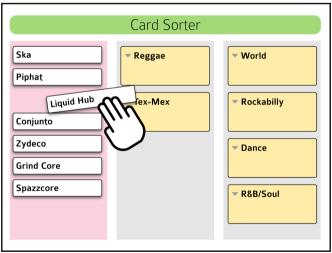

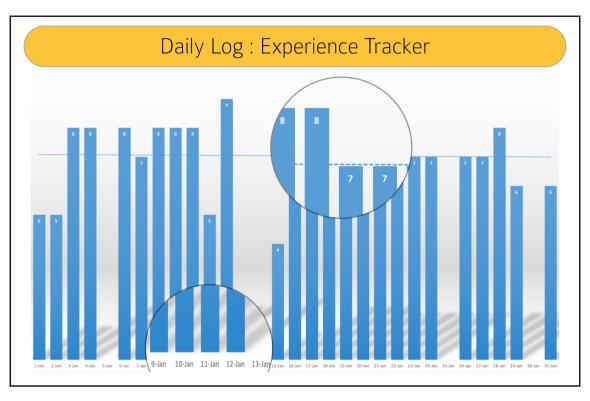

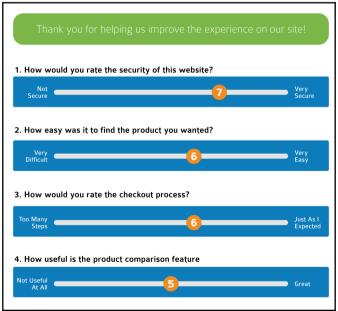

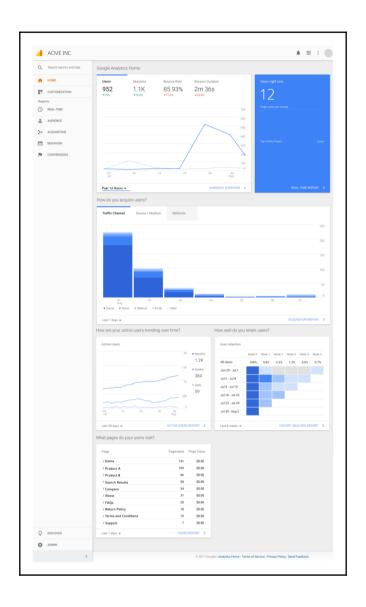

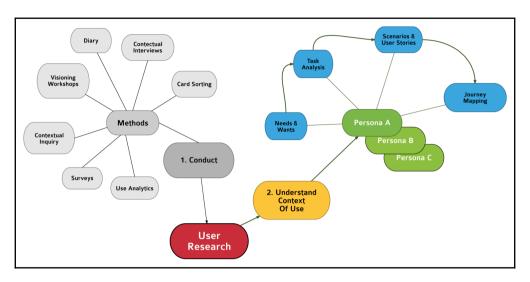



Explorer VI



Calibrating the Altimeter and Clearing HIGH and ACC


Calibration in ALTI mode allows you to calibrate the pressure sensor for improved accuracy as well as clear the HIGH and ACC data values.


Calibration operates exactly like setting, so refer to the section entitled "Setting Operation" on page 11 to under-stand how the buttons function during setting.

Also refer to the section entitled "Notes on calibrating the Altimeter and Barometer" on page 15 for general information regard- ing calibration.


For proper calibration, adjust the "CAL" value to reflect your actual altitude. The "CAL" value can be set to a value from -2296 ft (-700m) to +26520 ft (+9000m).

- Press and hold SET until the word "CAL" appears in the upper line of the display and the sign of the calibration value is flashing.
- Press START/SPLIT to adjust the sign (positive for altitudes above sea level, negative for altitudes below).
- 3 Press **MODE** to move on to adjusting the current altitude value.
- Using START/SPLIT (to increase) and STOP/RESET (to decrease), adjust flashing value.
- 5 Repeat steps 3 and 4 for each value of the calibration altitude.
- Oress MODE to move on to enable clearing of the HIGH data value. "HIGH" will be flashing in the upper line; the current value for the highest altitude will be displayed.
- Press and hold START/SPLIT to clear the value, if desired.

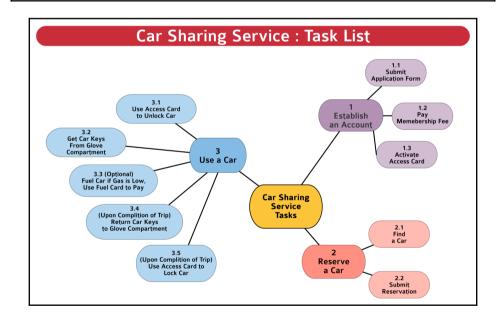

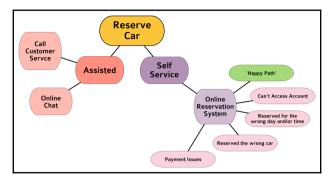





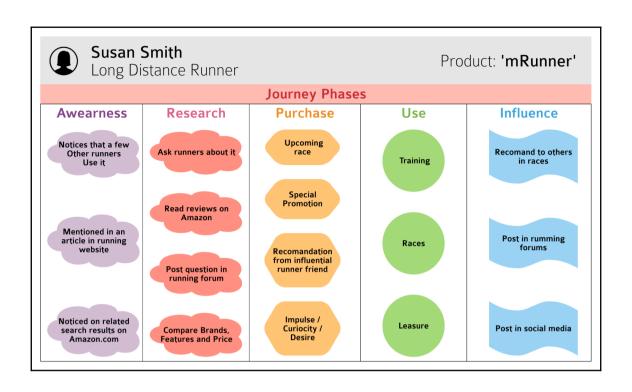

Chapter 5: Experience - Perception, Emotions, and Cognition




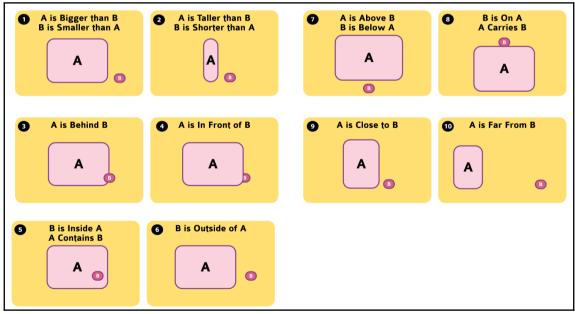

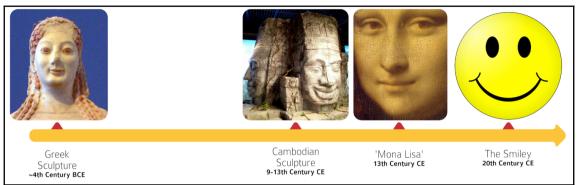







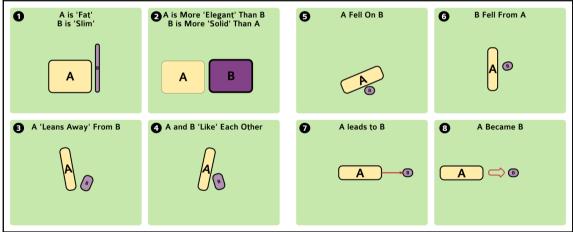




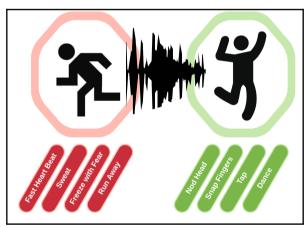



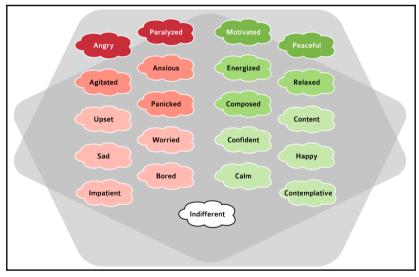

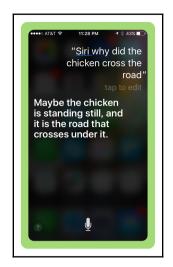
















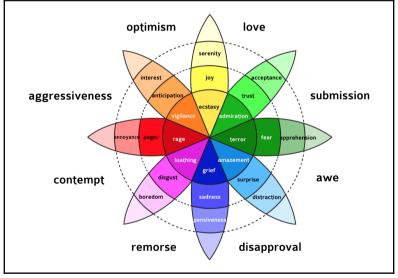



HOW DO YOU FEEL TODAY?

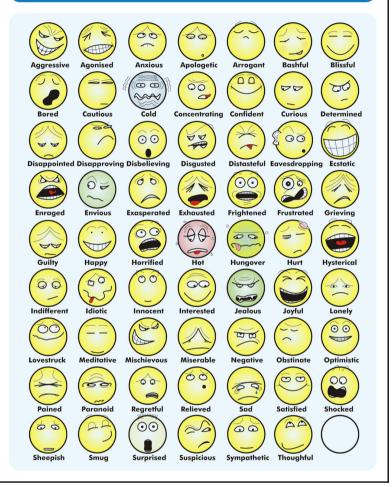

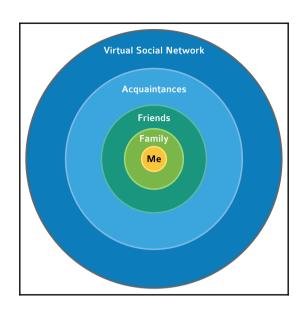




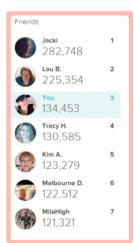


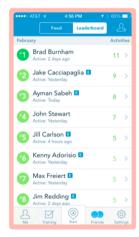




Chapter 6: Experience Design Disciplines

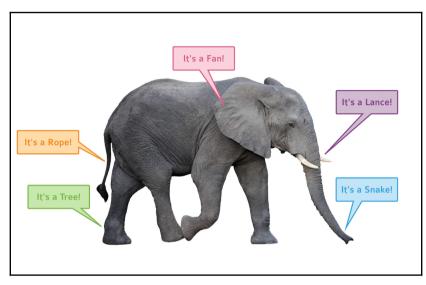


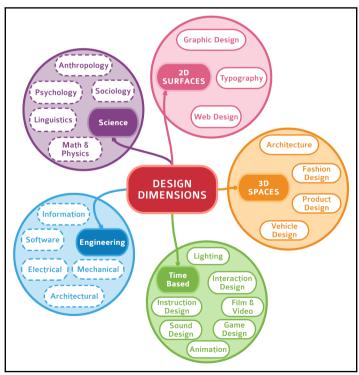


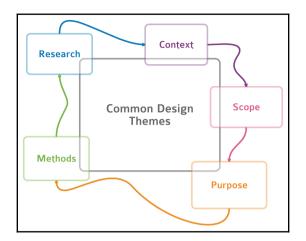







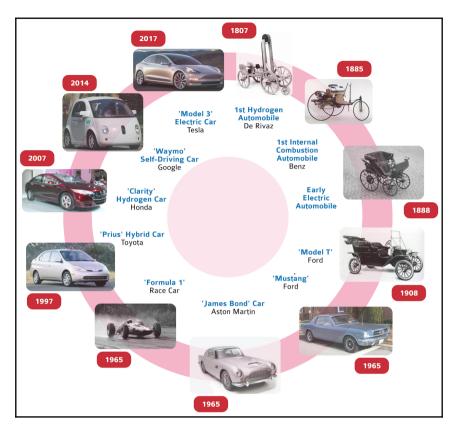

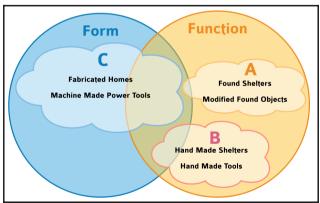

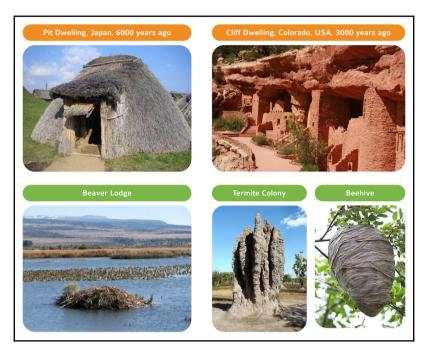

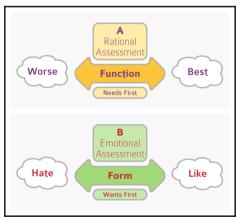
















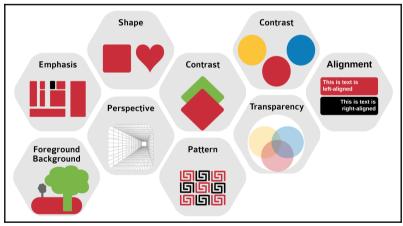


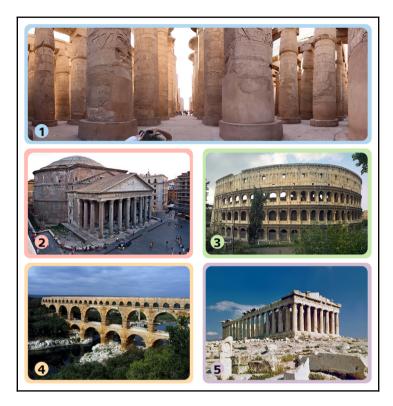

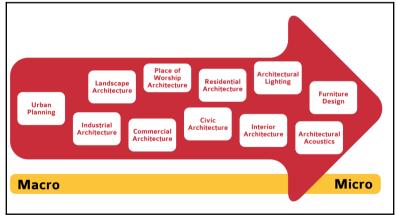






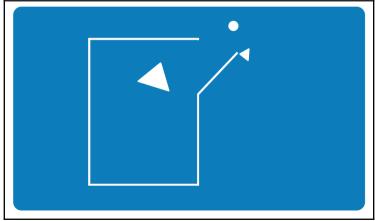




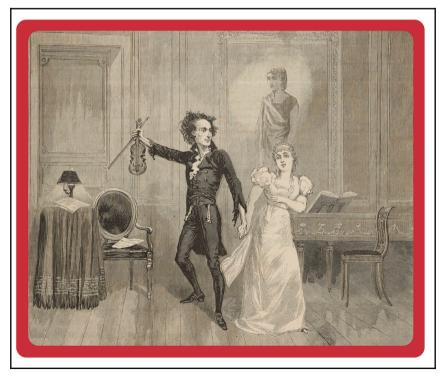







Chapter 7: The Design Team

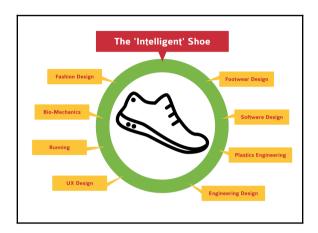

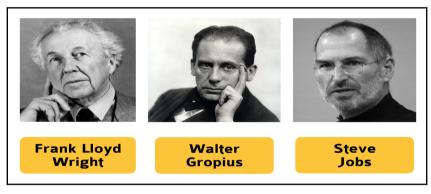





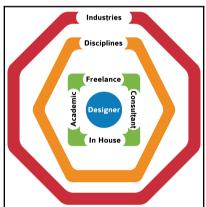

Chapter 8: Delight and Engagement



























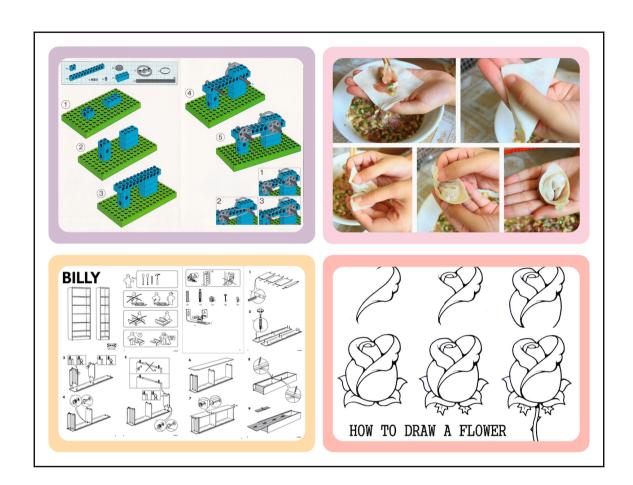







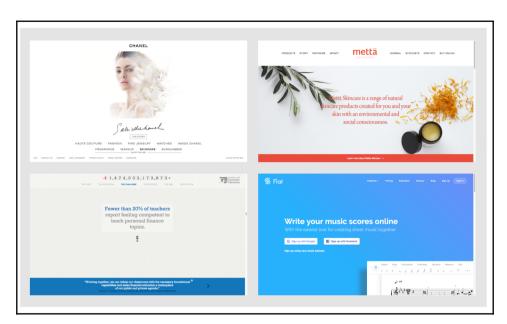







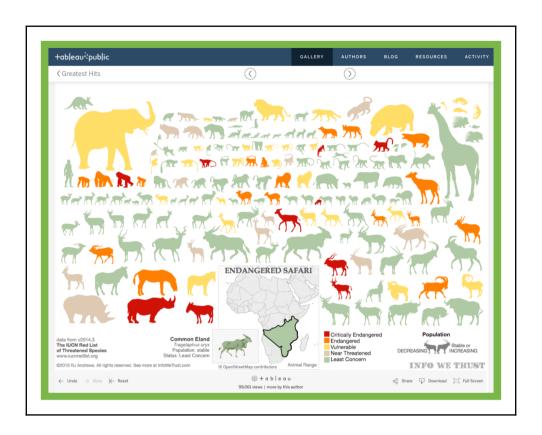


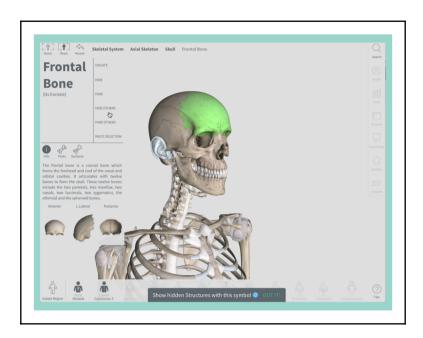





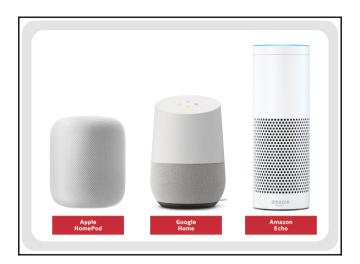

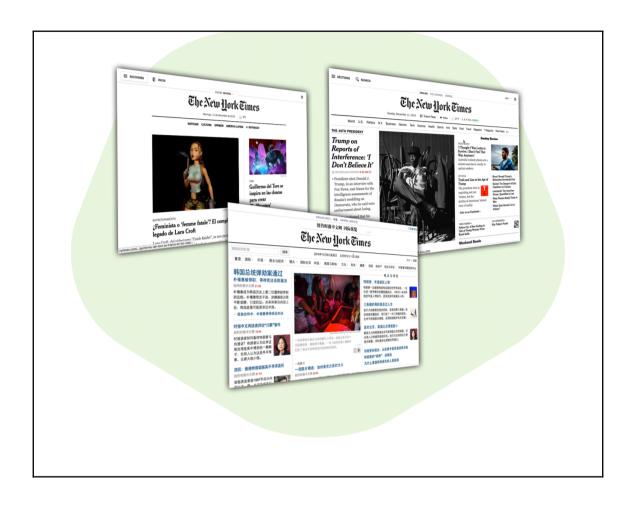

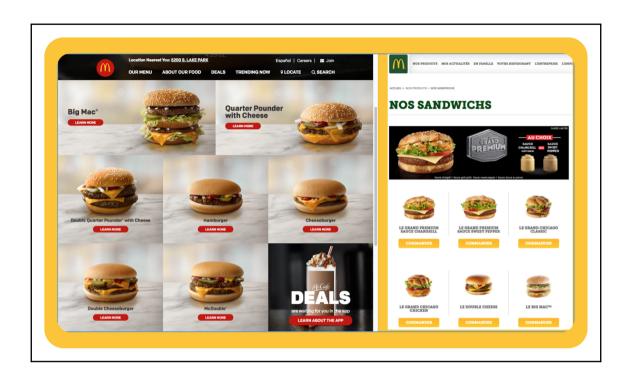


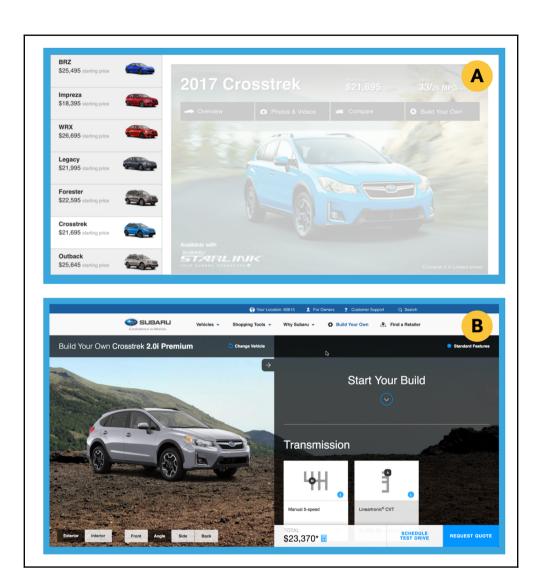

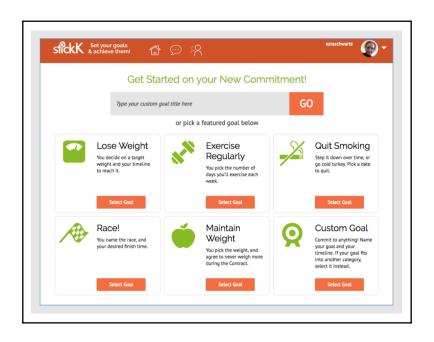



Chapter 9: Tying It All Together - From Concept to Design

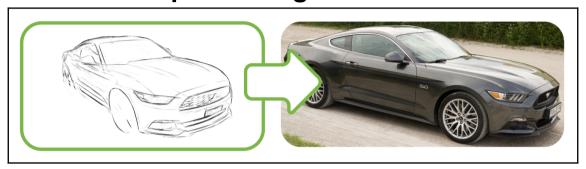























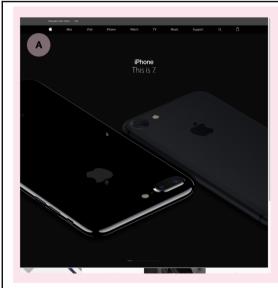


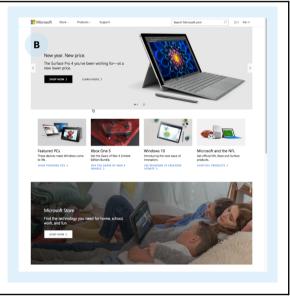





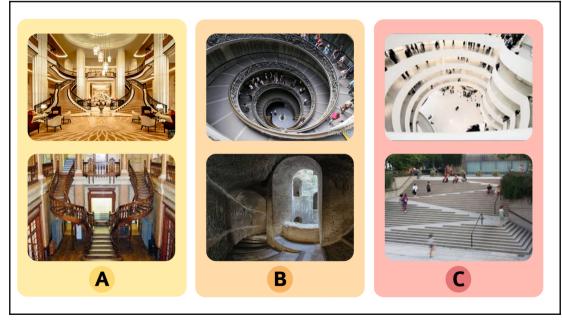


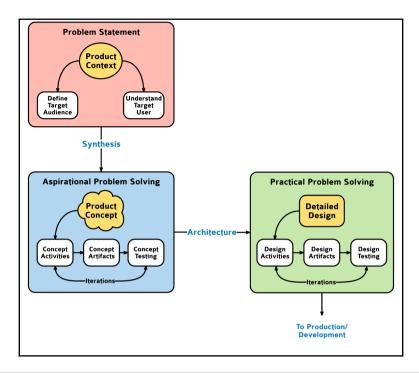

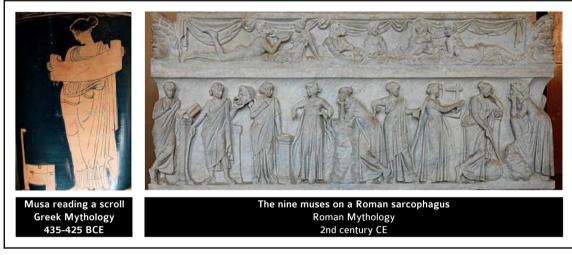


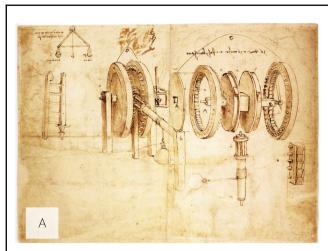

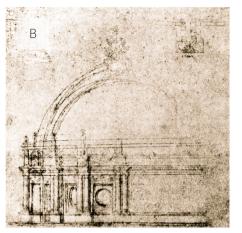

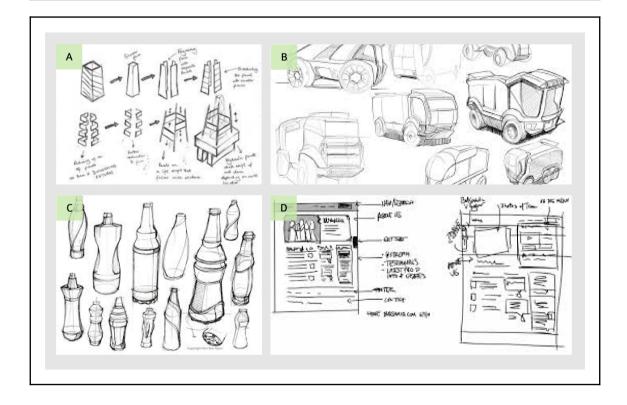




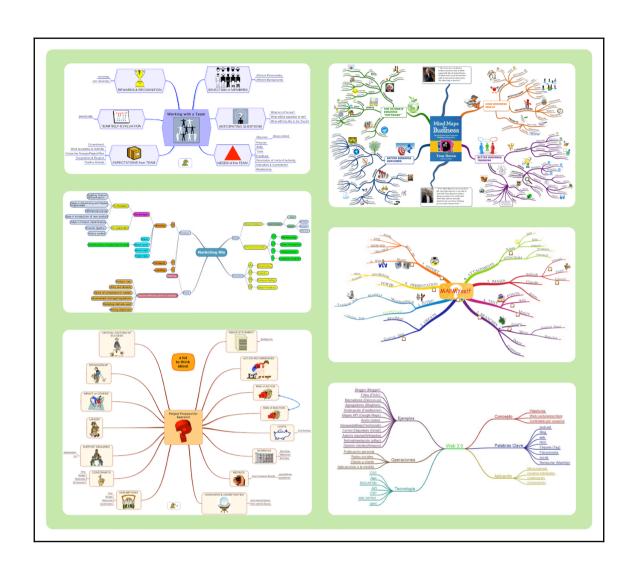










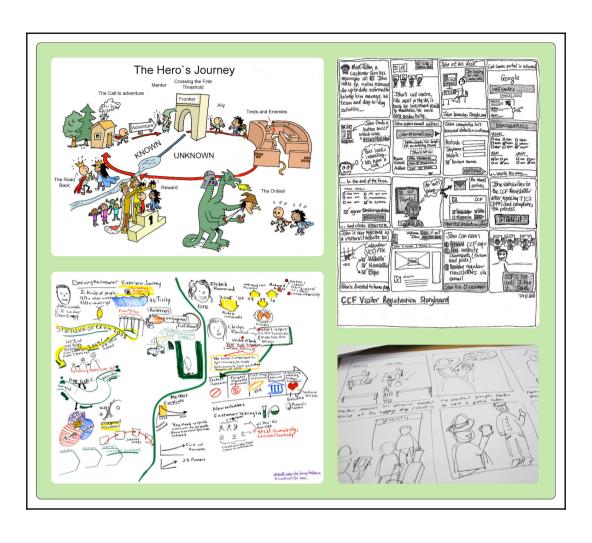



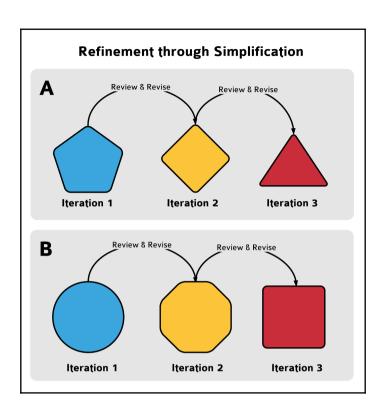

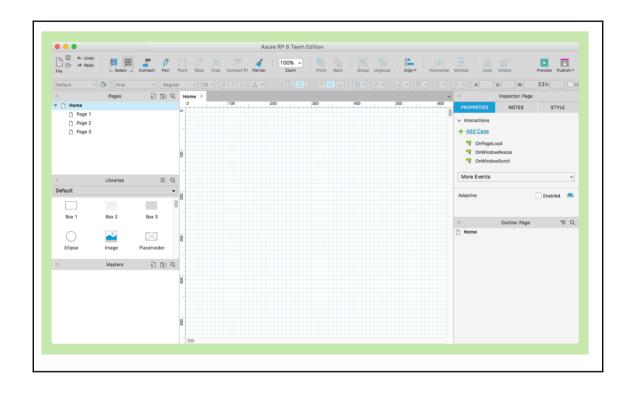

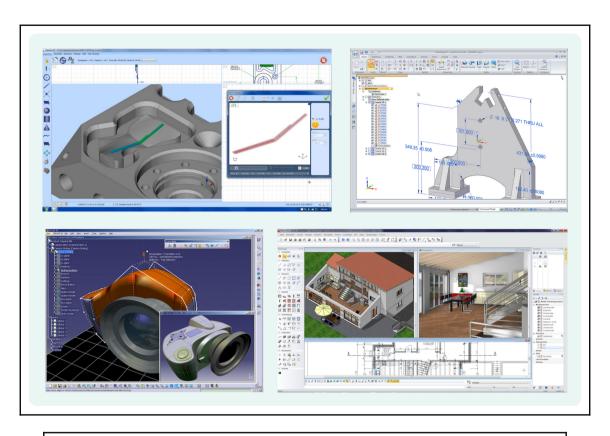








Chapter 10: Design Testing







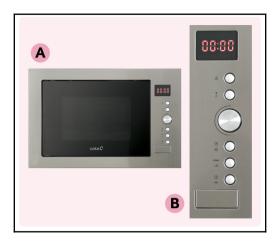

- $^{\mathrm{I}}$ 3. Grill Cooking
- 1) Press the "MICROWAVE/GRILL/COMBI./CONVE." key once, and "P100" display.
- 2) Press " MICROWAVE/GRILL/COMBI./CONVE." for times or turn " " to select the grill function. When "G-1" displays, it indicates grill function.
- 3) Press "START/+30SEC./CONFIRM" to confirm.
- 4)Turn " , to adjust the cooking time. (The time setting should be 0:05-95:00.)
- 5) Press " START/+30SEC./CONFIRM " to start cooking.


Note: If half the grill time passes, the oven will sound twice to tell you to turn over the food. You can just leave it continue. But in order to have a better effect of grilling food, you should turn the food over, close the door, and then press "START/+30SEC./CONFIRM" to continue cooking.

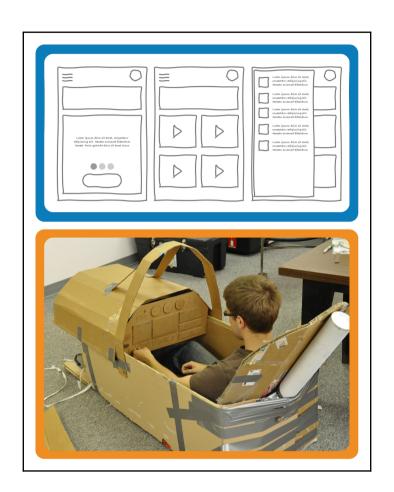


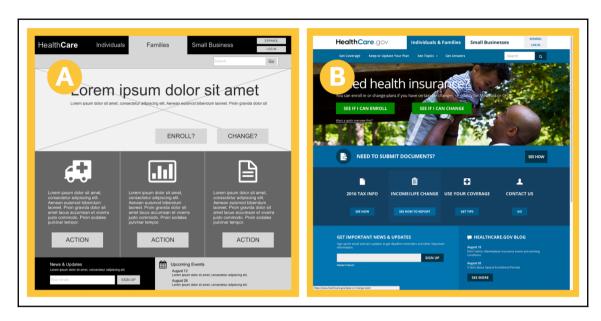






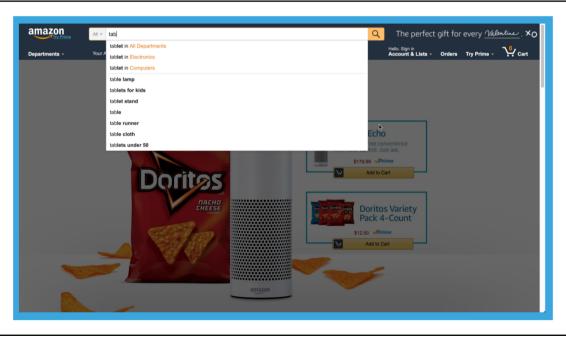

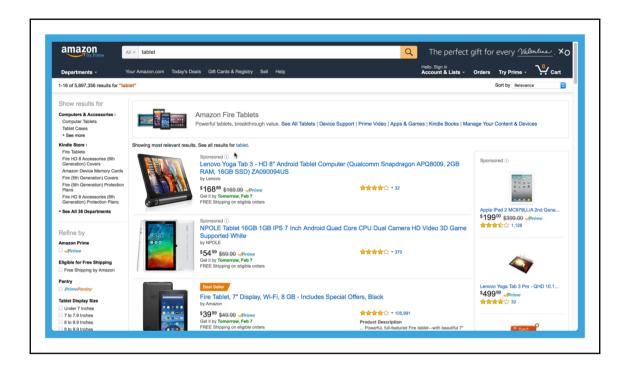

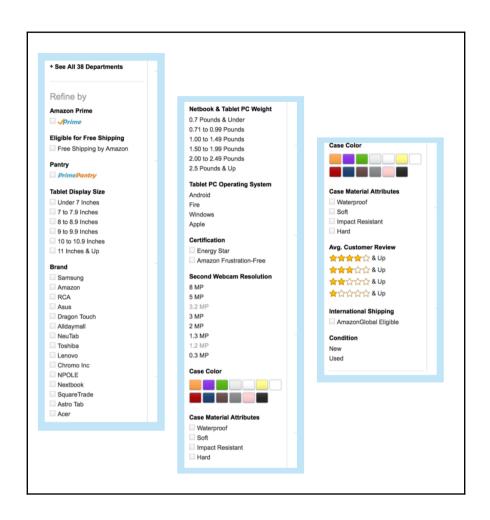








Chapter 11: The Design Continuum



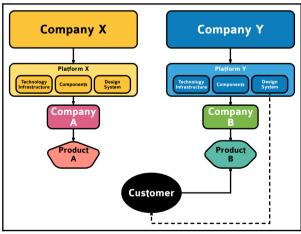


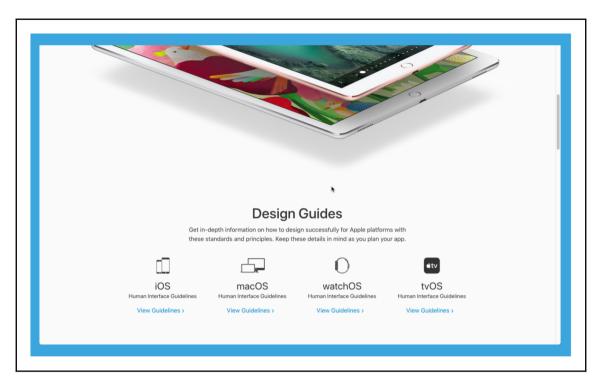


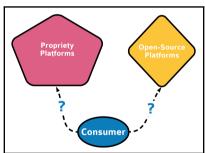







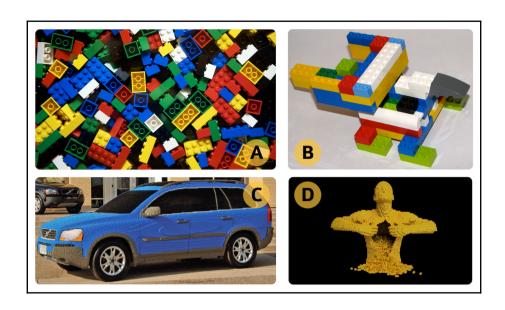

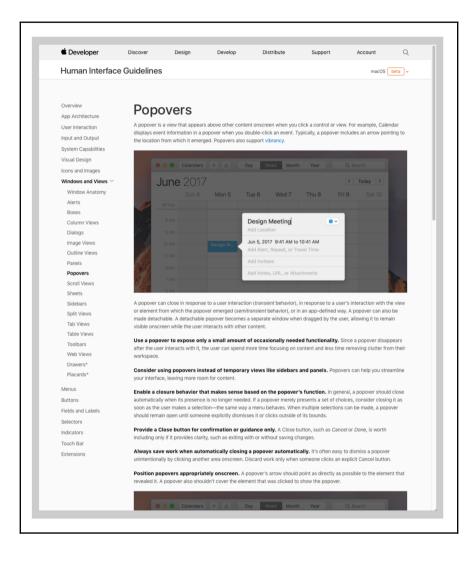

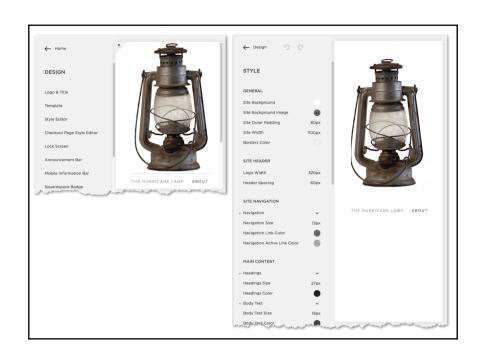



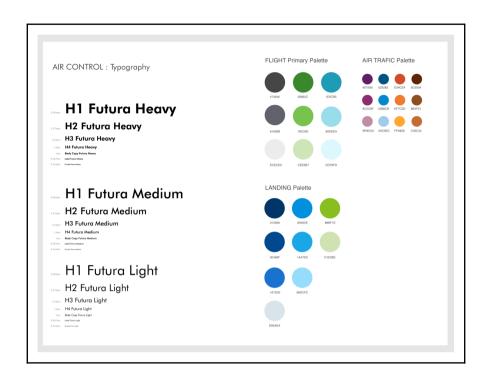

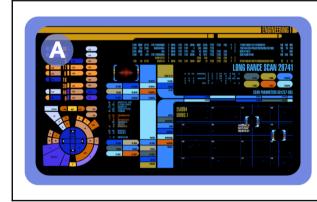




Table of Contents

Index	
IIIUEX	

Index